




THUNDER
SPORTS™

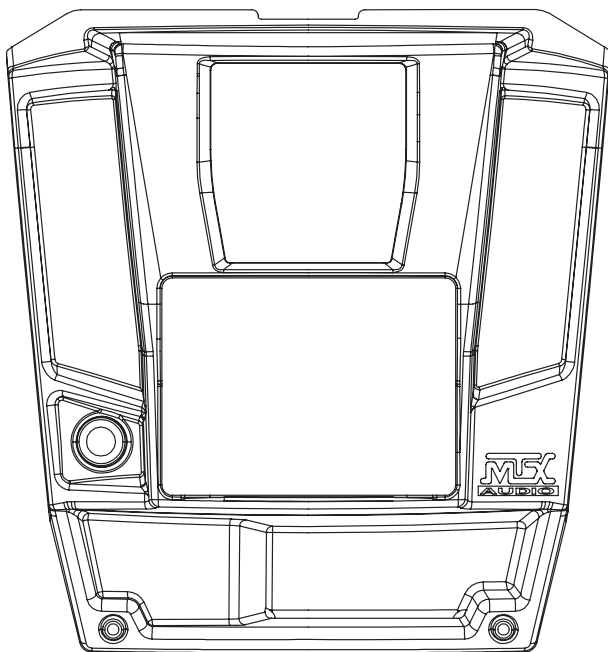

OWNER'S MANUAL
MUDRNGRDK
POLARIS® RANGER® DASH KIT
[FOR USE WITH MTX AWMC3 HEAD UNIT]

IMPORTANT NOTICE

If you have any questions regarding wire routing in a vehicle, please contact MTX Technical Support at 1-800-225-5689.

When connecting power and ground wires ensure that the red power wire is fused at the point where it is connected to the vehicle's battery. Failure to do so can result in damage to the vehicle if a short circuit develops between the vehicle connection point and the product.

PRODUCT INFORMATION

Model # _____

Serial # _____

Dealer's Name _____

Date of Purchase _____

IN THE BOX

- Dash Kit
- Allen Wrench
- (2) Shoulder Head Bolts
- (2) Speed Clips
- (4) Mounting Nuts

INSTALLATION TOOLS

The following is a list of suggested tools needed for installation:

- Torx - T40
- 5.5mm Nut Driver or Socket Wrench
- Pry Tool or Small Flat Blade

INTRODUCTION

Thank you for purchasing this Polaris® RANGER® Dash Kit designed for the MTX Audio AWM3 Bluetooth all-weather head unit. This easy to install dash kit is the perfect OEM fit solution for your Polaris® RANGER®. Congratulations and enjoy the ultimate audio experience with MTX!



FITS THE FOLLOWING VEHICLES

- RANGER® 570 Full-Size (2014 and up)
- RANGER XP® 900 (2014 and up)
- RANGER XP® 1000 EPS (2014 and up)
- RANGER® Diesel (2014 and up)
- RANGER CREW® 570-4 / 570-6 (2014 and up)
- RANGER CREW® XP 900 / XP1000 (2014 and up)
- RANGER CREW® Diesel (2014 and up)

Will not fit 2018 Northstar Fullsize, Northstar Crew, or High Lifter Edition.

Will work with Polaris heater accessory installed.

SPECIFICATIONS

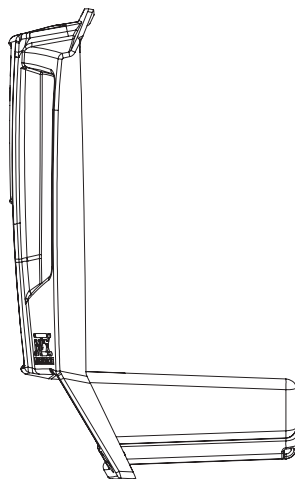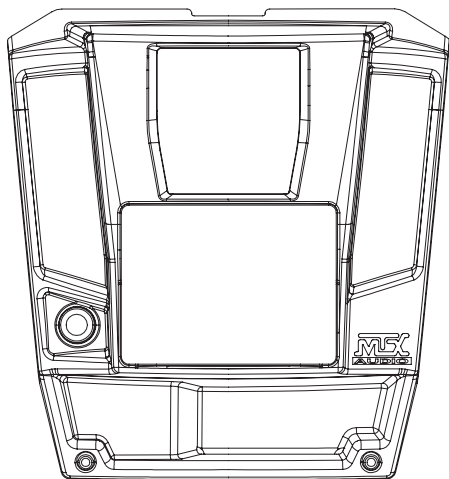

INSTALLATION

Step 1 - Remove the two (2) T40 screws found in the top dash cover.



Step 2 - Remove the two (2) trim panel pin rivets found on either side of the dash cover.




Step 3 - Lift and pull back the top dash cover to release the clips holding it in place.



Step 4 - Remove the two (2) T20 screws found at the bottom of the center dash panel and remove.

Note: Disconnect any switches making sure not to damage the vehicle or switch wiring. Make note to remember what connector is associated with each specific switch.

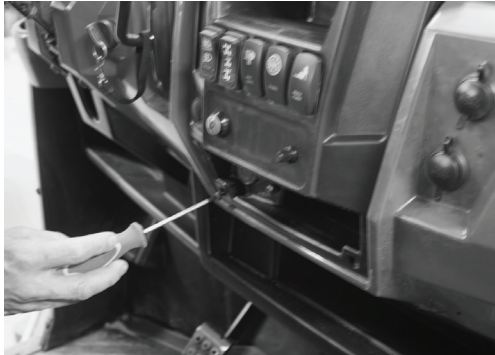

Step 5 - Prepare the new dash kit by aligning the radio with the four (4) pre-installed threaded posts.



Step 6 - With the radio seated in place, install four (4) included retaining nuts using a 5.5mm socket or nut driver



Note: This dash kit also offers space to mount additional rocker panel switches for accessories. On the rear of the dash kit, grooves are provided to give you proper location and size for mounting.

Step 7 - Reconnect any switches or wiring harnesses and insert the radio and dash kit assembly into the dash opening.



Step 8 - Mount the dash kit using the two (2) T-20 screws removed earlier.

Note: You would now make any power, ground, and speaker connections using the supplied radio harness



Step 9 - Reinstall the top dash panel and reattach using the hardware removed earlier.





MUD NATION[®]
LET'S DO SOMETHING DIRTY[®]

© 2017 Mitek Corporation. All rights reserved. MTX, Mud Nation, and Let's Do Something Dirty are trademarks of Mitek Corporation. All other trademarks are property of their respective owners. Designed and Engineered in the U.S.A.

Due to continual product development, all specifications are subject to change without notice.

MTX Audio, 4545 East Baseline Rd. Phoenix, AZ 85042 U.S.A. 1-800-225-5689

MTX005688 RevA 12/17 • 21A10623 • AW0015505